

# WALL CORNER BLIND CABINET




## Notes on Installation

A Filler and Overlay (ordered separately) are required for proper installation.

We recommend a minimum 3" filler width to ensure clearance for the cabinet door edges and handles.

- **A** = Cabinet Width
- **B** = Door Width
- **X** = **Recommended distance** from the wall to the opposite end of the cabinet.

Cabinets installed at minimum pull distances may not allow for proper clearance of door edges on perpendicular cabinetry. If used perpendicular to an appliance, pull distances should be determined by actual placement prior to installation to ensure proper clearances.

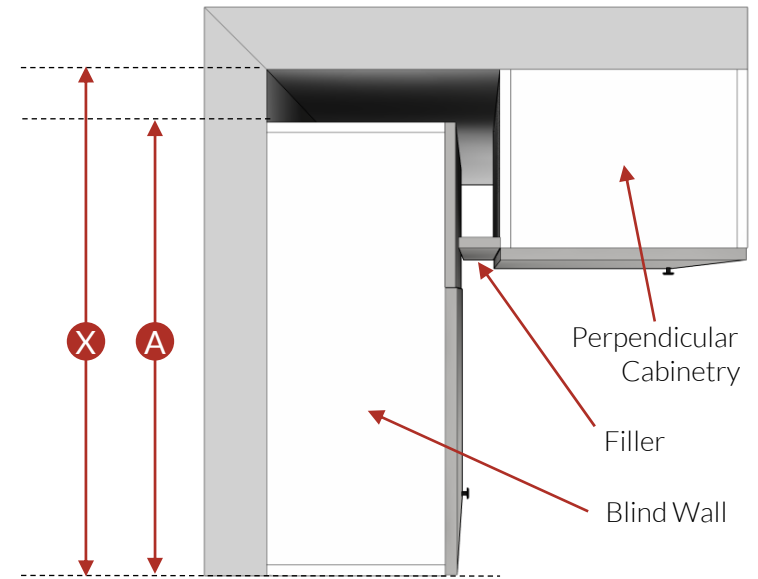

## Maximum and Minimum Pull Dimensions

| Cabinet    | <b>A</b><br>Cabinet Width | <b>B</b><br>Door Width | <b>X</b><br>Overall |
|------------|---------------------------|------------------------|---------------------|
| WC27XX-BLX | 27"                       | 11-7/8"                | 27-7/8"-30-7/8"     |
| WC30XX-BLX | 30"                       | 14-13/16"              | 30-7/8"-33-7/8"     |
| WC33XX-BLX | 33"                       | 17-13/16"              | 33-7/8"-36-7/8"     |
| WC36XX-BLX | 36"                       | 20-13/16"              | 36-7/8"-39-7/8"     |

