

# BLB CABINET

**Frameless**  
Cabinet Box Construction

 **Cabinets.com**<sup>®</sup>


## Notes on Installation

A Universal Filler (ordered separately) is required for proper installation.

We recommend a minimum 3" filler width to ensure opening the drawers of perpendicular cabinetry will clear the blind's drawer/door handles.

- **A** = Actual Cabinet Width
- **B** = Actual door opening width.
- **X** = **Recommended distance** from the wall to the opposite end of the cabinet.

Cabinets installed at minimum pull distances may not allow for proper clearance of drawer hardware on perpendicular cabinetry. If used perpendicular to an appliance, pull distances should be determined by actual placement prior to installation to ensure proper drawer and door clearances.

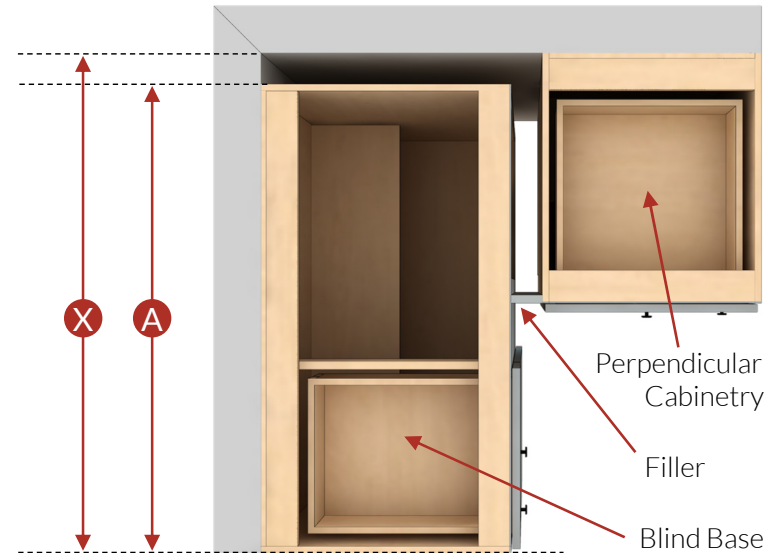

## Maximum and Minimum Pull Dimensions

	<b>A</b> Cabinet Width	<b>B</b> Door Opening	<b>X</b> Overall
<b>Cabinet</b>			
<b>BLB36/39</b>	36"	7-3/4"	36-1/2"-39"
<b>BLB39/42</b>	39"	10-3/4"	39-1/2"-42"
<b>BLB42/45</b>	42"	13-3/4"	42-1/2"-45"
<b>BLB45/48</b>	45"	16-3/4"	45-1/2"-48"

